

M&P Survey Equipment

Merdian House
Stanney Mill Road
Little Stanney
Chester CH2 4HX

**SUPPLY. SERVICE. SUPPORT.** 

## **Alarm Instructions**

## **Installing the Battery**

- (a) Lift up the red cable clamp on the Lock/Alarm unit (you may find this easier if you press the centre of the flat surface of the clamp with your thumb whilst at the same time pulling the clamp open with your other fingers) and unwrap the cable to reveal the front cover release tabs (see diagram below).
- (b) Ensure the key is in the unlocked (vertical) position and remove the front cover of the unit by pressing in the top or bottom release tab (you will need to use a screwdriver to do this) and pulling the cover away from the base at the same time.
- (c) Remove the red battery cover and fit a high quality 9 volt ALKALINE battery. Replace battery cover and tighten screws.
- (d) Refit the front cover of the Lock/Alarm unit (ensure the key remains in the fully unlocked position as you do this) ensuring that BOTH release tabs click FULLY back into place.
- (e) Your Lock/Alarm is now ready to use. Please now refer to the "Using the Lock/Alarm" section overleaf.

## Fitting - using the U bracket

- 1. Following steps (a) & (b) 'Installing Battery' section overleaf, remove the front cover of the Lock/Alarm unit.
- 2. Position the red U bracket around the tubing onto which the unit is to be mounted. To protect the tube from scratching, wrap adhesive tape around the tube first.
- 3. Slot the rear of the Lock/Alarm unit onto the U bracket legs. Make sure the fit between the U bracket and the Lock/Alarm unit is tight before screwing together. If there is space between the tube and the Lock/Alarm unit, pack out using adhesive tape.
- 4. Using the shorter of the screws provided, fix the unit onto the U bracket by locating the screws through the holes in the metal chassis in the Lock/Alarm and into the U bracket legs. Take care not to over tighten.
- 5. Following steps (c) & (d) in the 'Installing Battery' section, fit battery and replace the front cover of the unit.



Using the alarm



M&P Survey Equipment

Merdian House
Stanney Mill Road

Little Stanney
Chester CH2 4HX

SUPPLY. SERVICE. SUPPORT.

- 1. Guide the steel cable around the item(s) you are protecting and finish with the end of the cable back at the Lock/Alarm unit. If Lock/Alarm is freestanding or attached onto the item, the cable ideally needs to be passed also around a fixed object eg. a post or a railing.
- 2. Raise the hinged flap which covers the lock hole on the front of the Lock/Alarm unit (you may need to release the red cable clamp first in order to lift the flap). Insert the steel end of the cable into this hole (make sure that it goes in all the way you may have to use gentle force to do this when the product is new) and turn the key to lock it in position you have just locked the cable and set the alarm.
- 3. Any excess cable can be wrapped around the body of the Lock/Alarm unit and clamped tight using the red cable clamp. Alternatively, the extra cable can be wrapped around a solid object eg. a post, before being locked into position.
- 4. To test the alarm prior to use turn the key to the locked position without inserting the cable into the lock the alarm siren should sound within a few seconds. If it doesn't then you should change the battery.